

POWERCASE

ByteFlow Micro White
(CAMBFW-A4)

A Package details

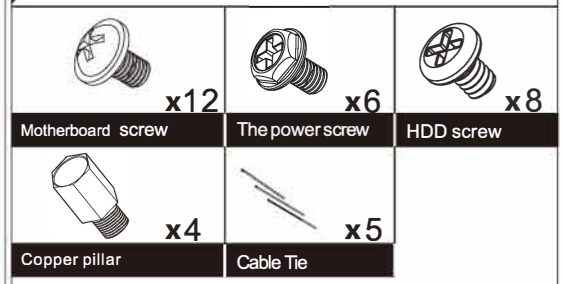


B Schematic diagram of wire interface

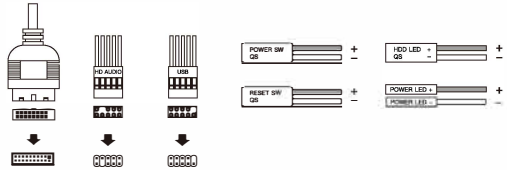


Please refer to the manual that came with your motherboard for any specific connection instructions

C Product size

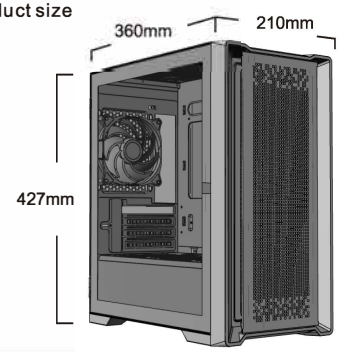


D

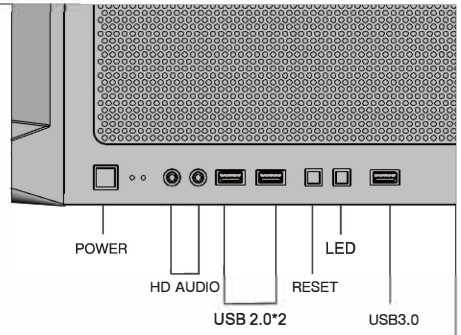


IO panel


E Machine overview

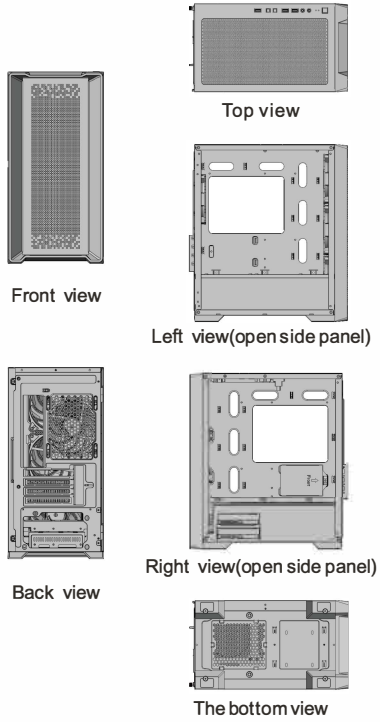

F Chassis disassembly diagram

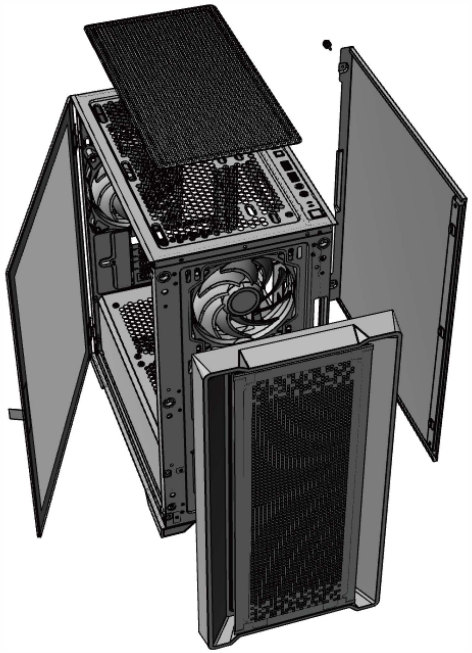


G Remove and install side panels

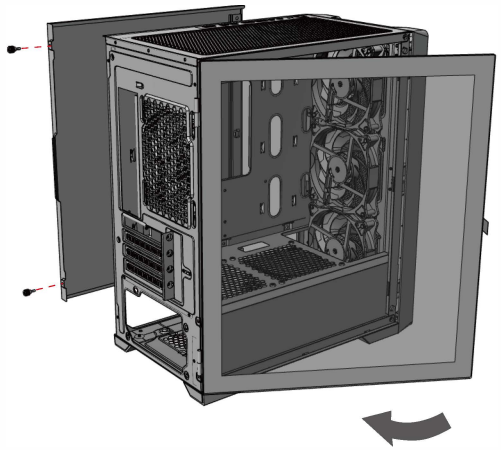


Glass side panel open: Pull the tab and pull it out
Metal side plate installation: buckle the side plate and fix it with two screws

H The power supply installation

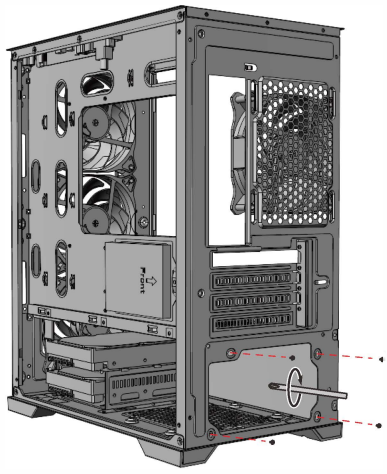


The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different,take the actual object as the standard

I Motherboard installation

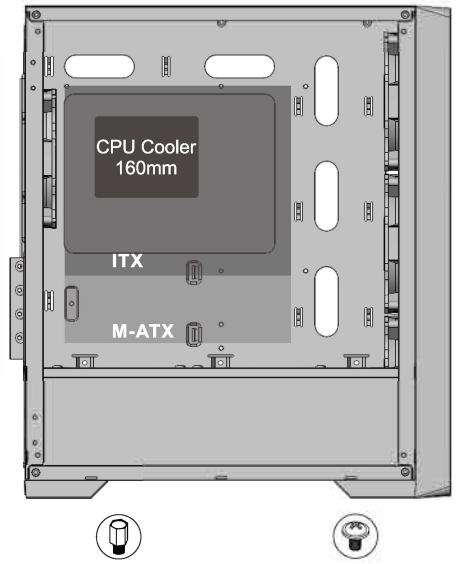


According to the motherboard type (M-ATX/ITX),
the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 160mm

J The graphics card installation

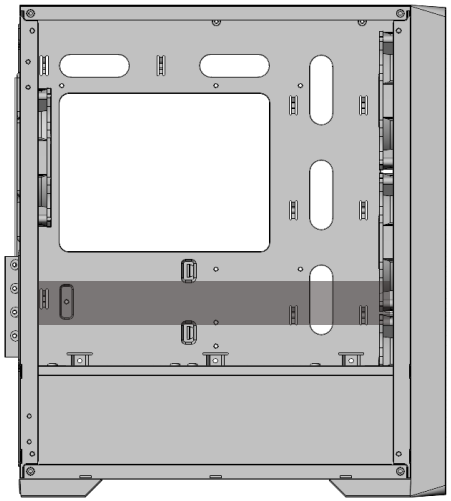


Max VGA Length: 330mm

K Panel disassembly

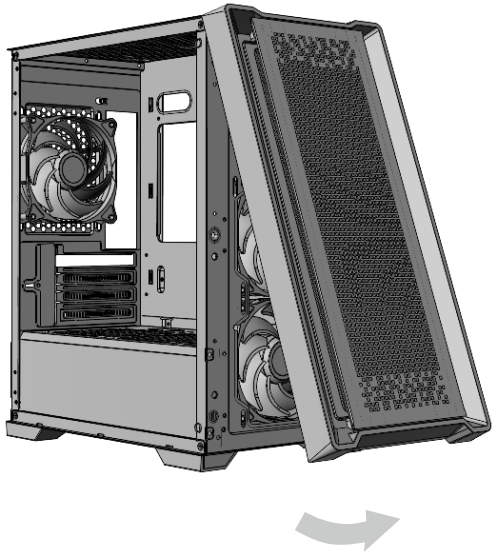


To remove the front panel of the case, pull it by hand, firmly from the bottom of the panel

L Fan installation

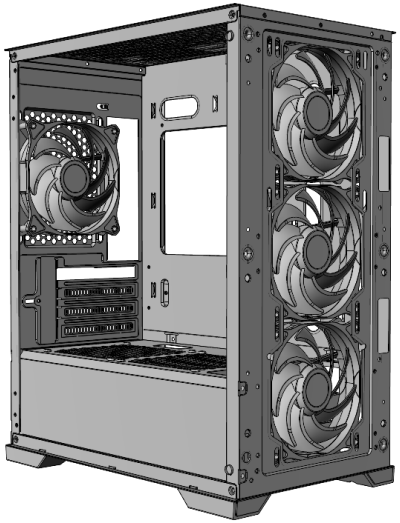


Fan Support: Front: 120mm x 3 (included)
Top: 120/140mm x 3 (optional)
Rear: 120mm x 1 (included)
PSU cover: 120mm x 2 (optional)

M Water cooling installation

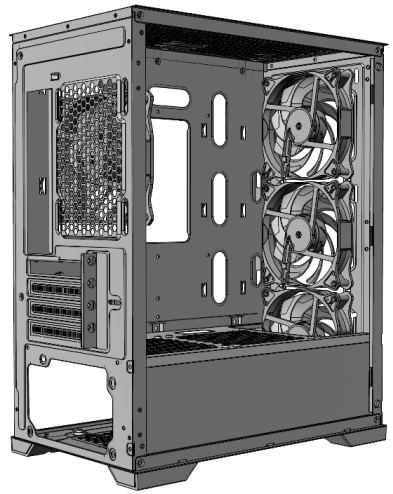

Water cooling: 240mm at Top
120mm at Rear


N SSD installation

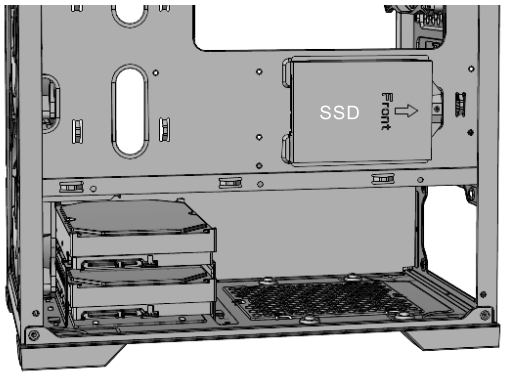

2.5"SSDx1

Align the SSD holes and fix them with screws


O HDD installation

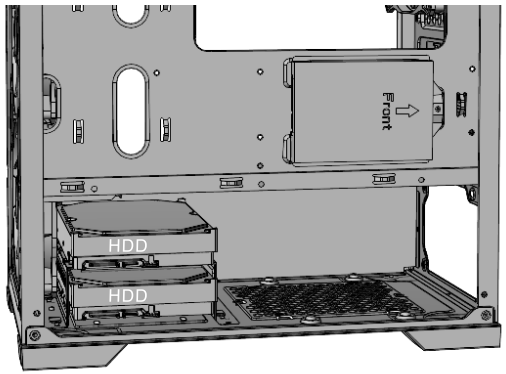

3.5"HDDx2


Align the hard disk holes and fix them with HDD screws

P Dust Cover disassembly

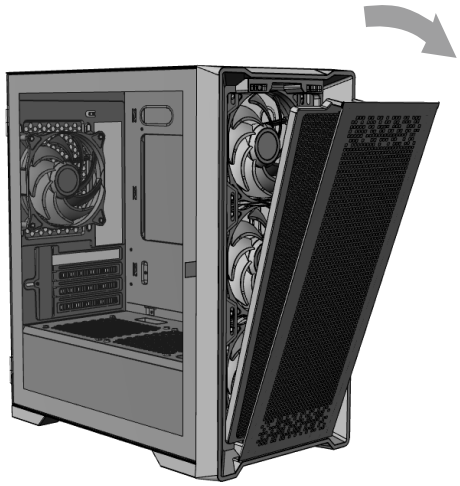

The way of Front panel opens is by Clip (without screws).

Q PWM function + ARGB controller user instruction

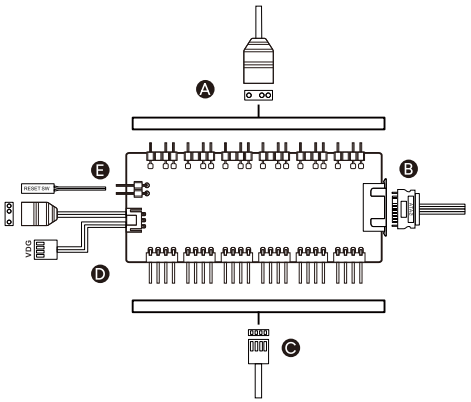

Ⓐ Interface for 5V3PIN LED wire, support 6pcs FANs.
Ⓑ SATA power connector (PSU).
Ⓒ Connected with 3 pcs small PWM 4PIN.
Ⓓ Universal link to motherboard 5V 3pin connector.
Ⓔ Can switch to the computer reset button.

POWERCASE