

POWERCASE

Ultimate White
(CUW-A4)

A Package details

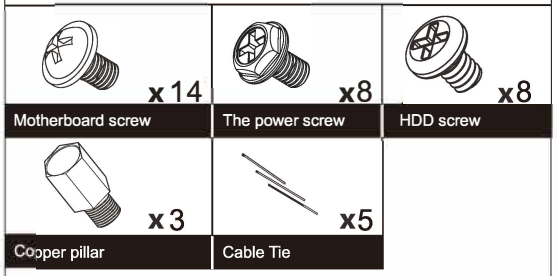


B Schematic diagram of wire interface

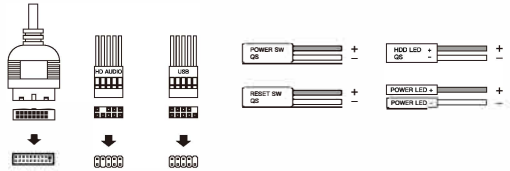


Please refer to the manual that came with your motherboard for any specific connection instructions


C Product size

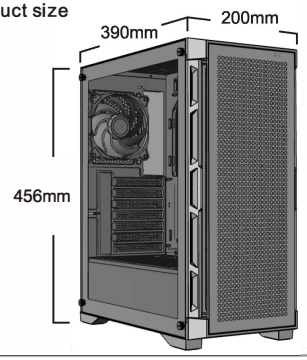


D IO panel

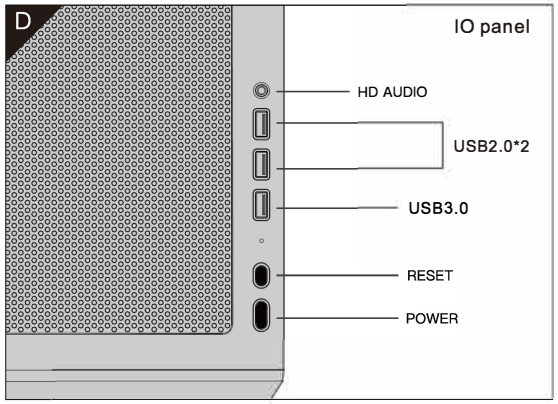


E Machine overview

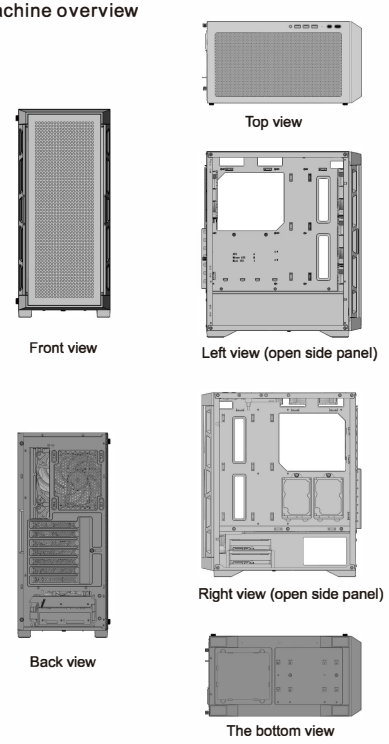

F Chassis disassembly diagram

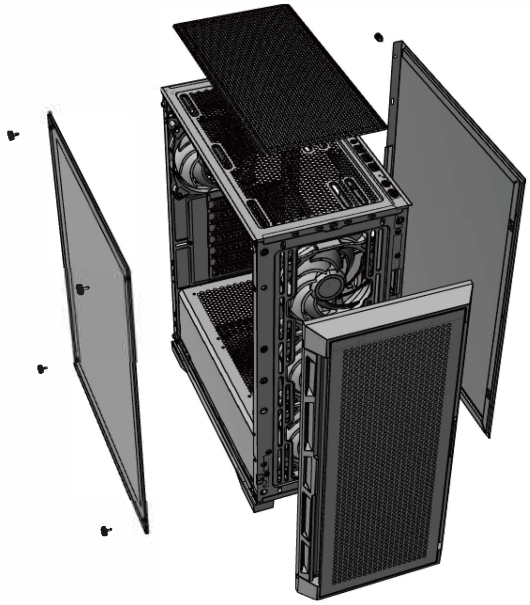


G Remove and install side panels

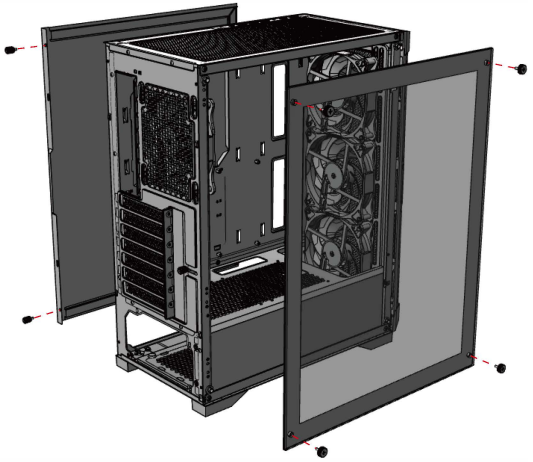


Glass side panel installation:
Fix the glass side panel with 4 screws (as shown above)
Metal side plate installation:
Buckle the side plate and fix it with two screws

H The power supply installation

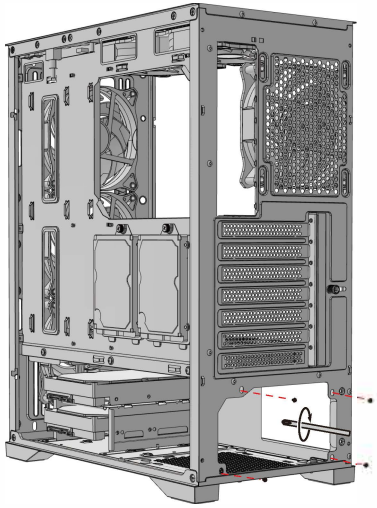


The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different,take the actual object as the standard

I Motherboard installation

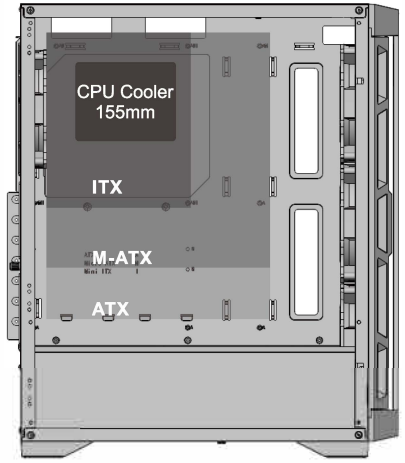


According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 155mm

J The graphics card installation

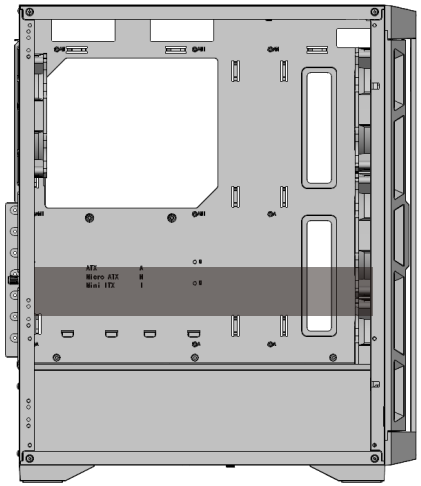


Max VGA Length: 330mm

K Panel disassembly

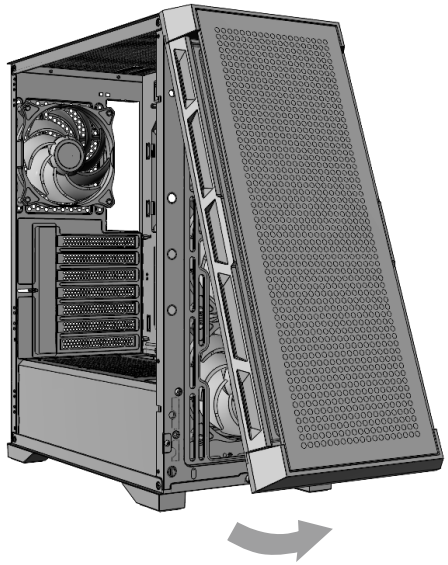


To remove the front panel of the case, pull it by hand, firmly from the bottom of the panel

L Fan installation

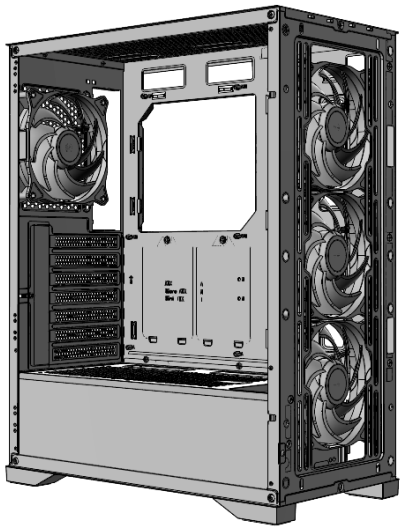


Fan Support: Front: 120mm x 3 (included)
Rear: 120mm x 1 (included)
Top: 120/140mm x 2 (optional)
Bottom: 120mm x 2 (optional)

M Water cooling installation

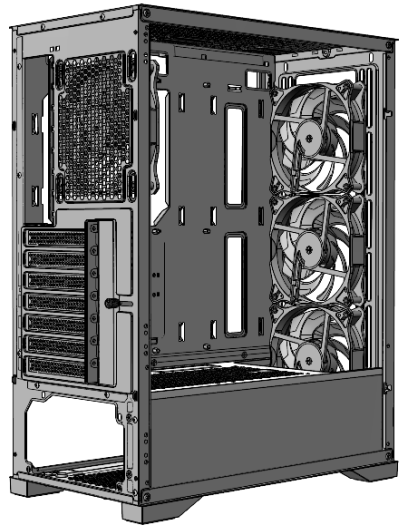

Water cooling: 360/280/240mm at Front
120mm at Rear


N SSD installation

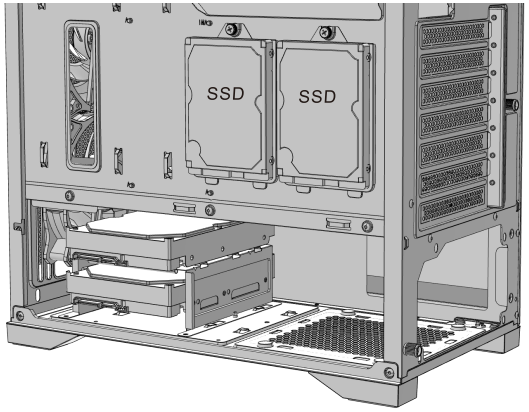

SSD*2

Align the SSD holes and fix them with screws

O HDD installation

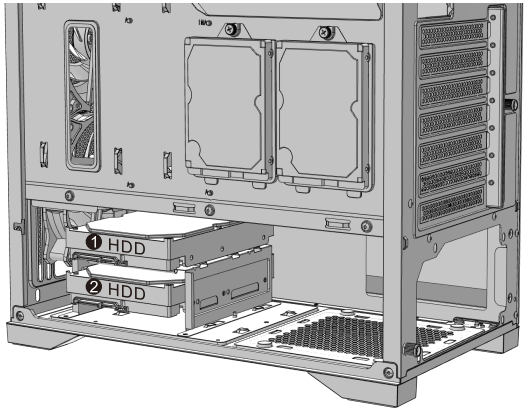


HDD*2

Align the hard disk holes and fix them with HDD screws


O Pull out the air filter

Pull out the dust cover net.

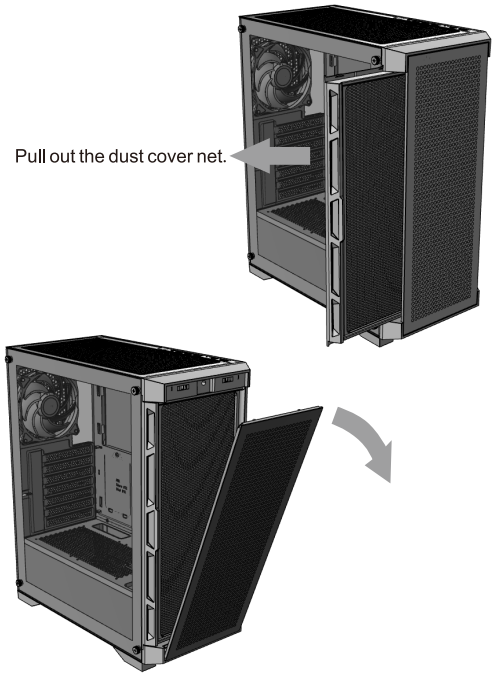

The way of Front panel opens is by Clip (without screws).

Q PWM function + ARGB controller user instruction

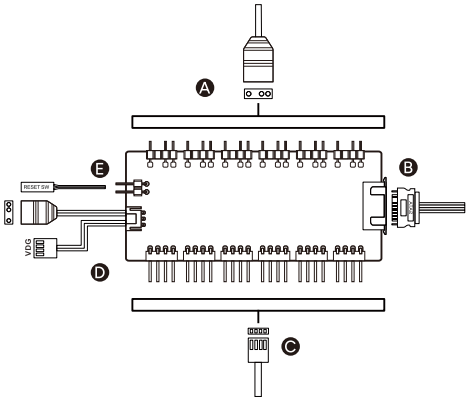

Ⓐ Interface for 5V3PIN LED wire, support 6pcs FANs.
Ⓑ SATA power connector (PSU).
Ⓒ Connected with 3 pcs small PWM 4PIN.
Ⓓ Universal link to motherboard 5V 3pin connector.
Ⓔ Can switch to the computer reset button.

POWERCASE