
POWERCASE

Vision Micro S4W
(CVMMSHW-A3)

A Package details


 x14	 x 8	 x 8
Motherboard screw	The power screw	HDD screw
 x 3	 x12	 x 5
Copper pillar	Fan screw	Cable Tie
 x 2		
OD snap		

B Schematic diagram of wire interface

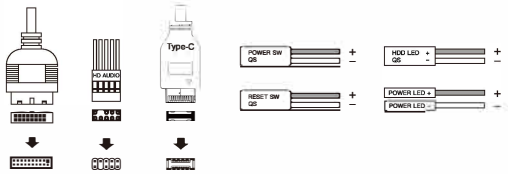


Please refer to the manual that came with your motherboard for any specific connection instructions

C Product size

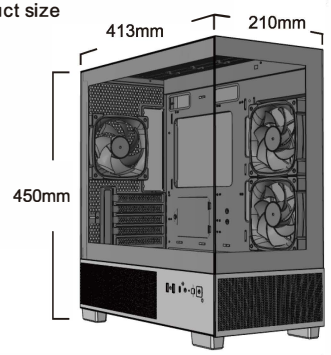


D

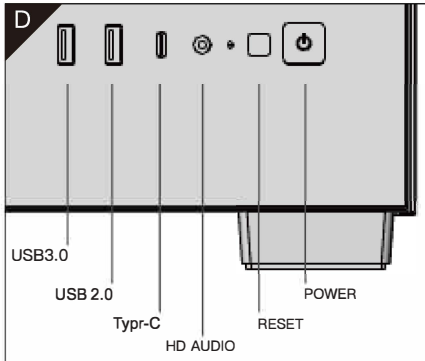


IO panel


E Machine overview



Front view


Top view

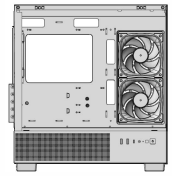

Left view(open side panel)


Back view

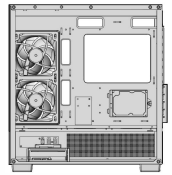

Right view(open side panel)


The bottom view

F Chassis disassembly diagram

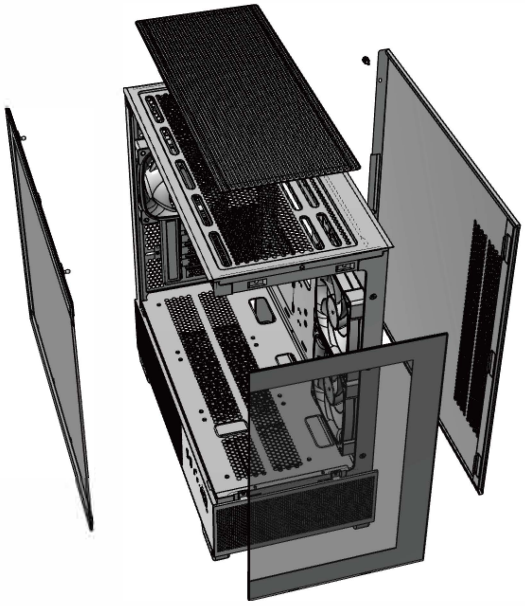


G Remove and install side panels

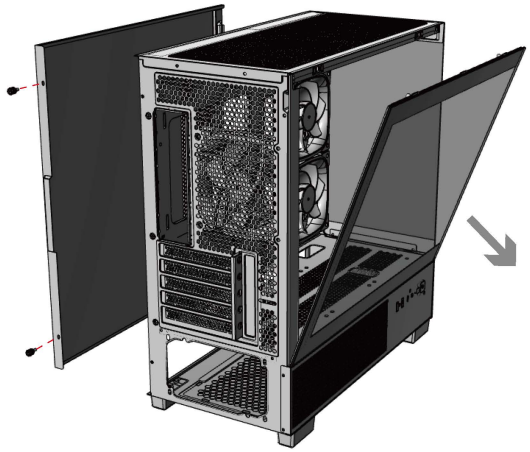


The way of Side glass panel opens is by Clip (without screws).
Remove the iron side plate: remove the two screws at the rear.

H The power supply installation

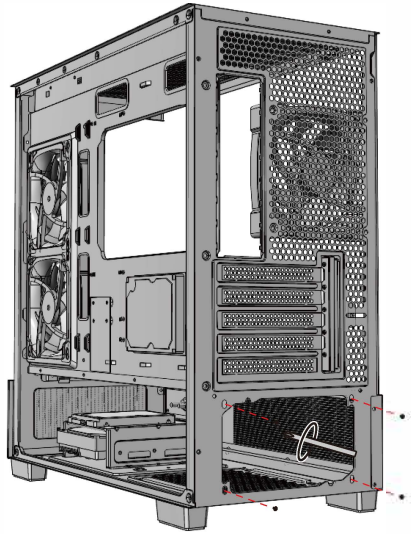

The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different,take the actual object as the standard


I Motherboard installation

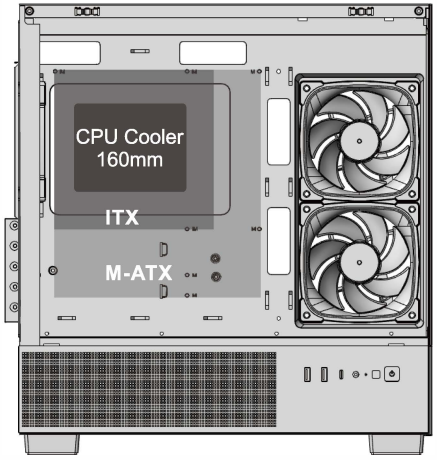




According to the motherboard type (M-ATX/ITX),
the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 160mm

J The graphics card installation

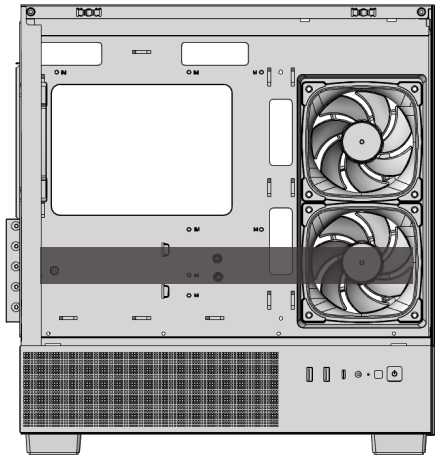


Max VGA Length: 405mm

K Panel disassembly

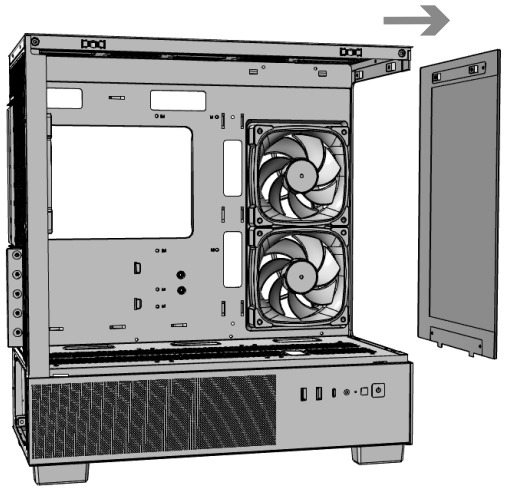


Installation: Fit the panel to the front panel and fix it with screws from the inside of the chassis
Removal: Unscrew the screws from the inside of the chassis and remove the panel

L Fan installation

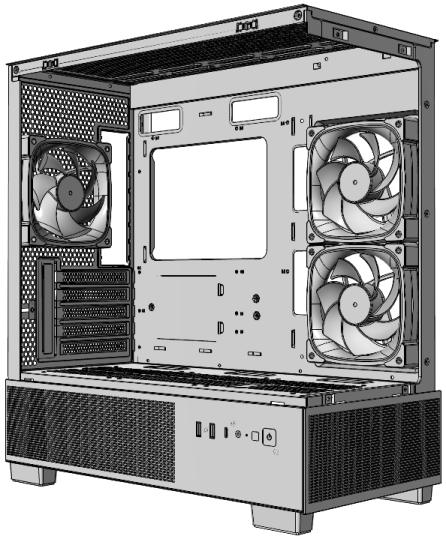


Fan Support: MB tray: 120mm x 2 (included)
Top: 120mm x 3 / 140mm x 2 (optional)
Rear: 120mm x 1 (included)
Bottom: 120mm x 3 (optional)

M Water cooling installation

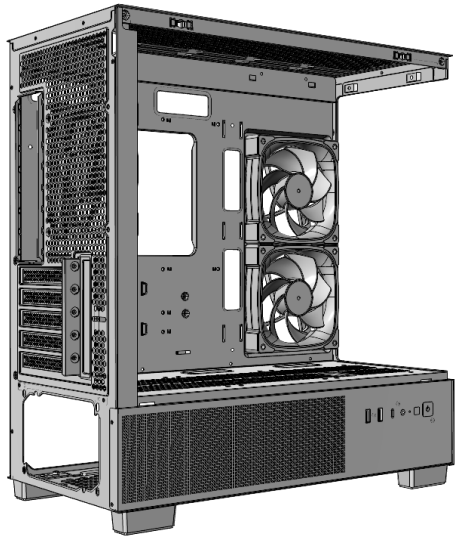

Water cooling: 360/280/240/140/120mm at Top
120mm at Rear


N SSD installation

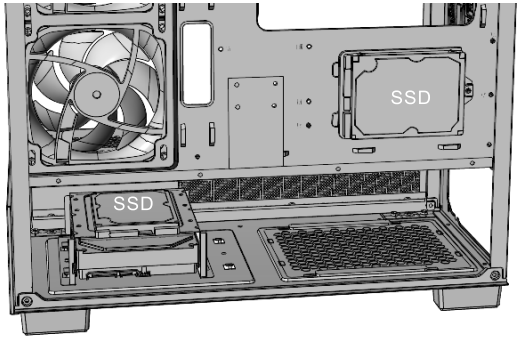

SSD*2

Align the SSD holes and fix them with screws


O HDD installation

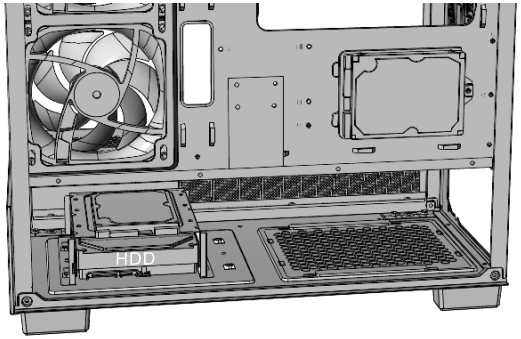

HDD*1

Align the hard disk holes and fix them with HDD screws

P PWM function + ARGB controller user instruction

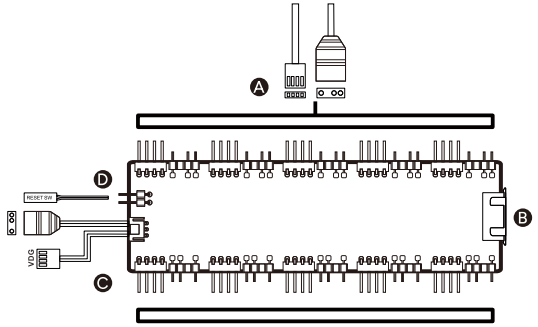

Ⓐ Connected with 4 pcs small PWM 4PIN.
Interface for 5V3PIN LED wire.
Ⓑ SATA power connector (PSU).
Ⓒ Universal link to motherboard 5V 3pin connector.
Ⓓ Can switch to the computer reset button.

POWERCASE